


REPAIR TO UTILITY CUT

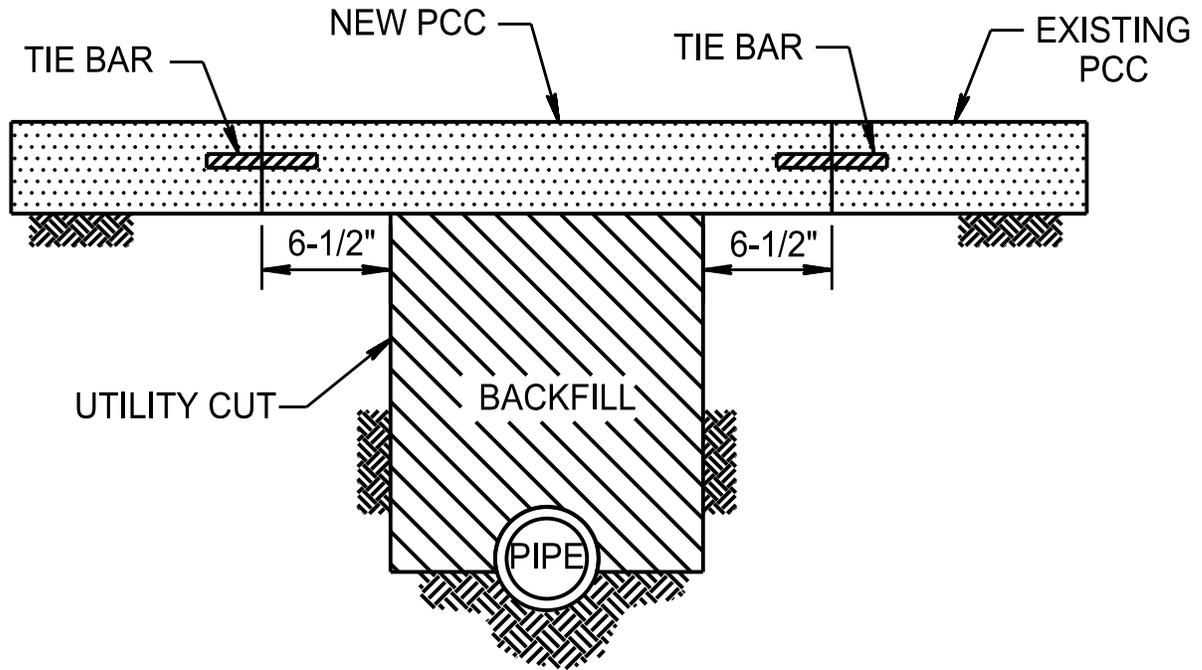

REPAIR METHOD: REMOVE PAVEMENT FROM EDGES OF THE CUT 6-12 INCHES, BACKFILL THE CUT WITH WELL-COMPACTED LAYER MEETING SPECIFIED DENSITY, TO THE BOTTOM OF PAVEMENT STRUCTURE, PLACE A CONCRETE SLAB OF REQUIRED THICKNESS; INSTALL TIE BARS AS REQUIRED BY DRILLING & EPOXYING INTO EXISTING PCC.

REFERENCE: TM 5-822-6/AFM 88-7, CHAPTER 1,
RIGID PAVEMENT FOR ROADS,
STREETS, WALKS AND OPEN
STORAGE AREAS

REPAIR OF CONCRETE PAVEMENTS (UTILITY CUT)

DATE
AUG 1992

FIGURE
2-33g